

Torque & Depth Prox Adjustment

To Adjust the Screwdriving Depth

Loosen the Thumbscrews on the Prox Mount, Then slide the prox mount on the Slide Bar until the desired Depth is achieved.

